

SPARE **AMAL** PARTS

LIST  
No. D470.



**RACING  
CARBURETTER**

(with Type 302 Float Chamber).  
Price List of MIXING CHAMBER PARTS

Component	FOR	FOR	List Price	FOR	List Price
	T15GP	T10GP		T5GP	
Mixing Chamber Body .. .. .	Specify Engine	Specify Engine	s. d.	Specify Engine	s. d.
Mixing Chamber Top .. .. .	Details	Details	120 0	Details	155 0
Mixing Chamber Cap .. .. .	316/097	316/045	6 0	316/049	7 6
Lock Spring for Mixing Chamber Cap	316/103	316/046	6 0	316/050	7 6
Adjuster for Throttle Cable .. .. .	316/098	316/126	1 6	316/048	2 0
Lock Nut for ditto .. .. .	316/159	316/159	1 0	316/159	1 0
Throttle Cable Adjuster Sheath .. .. .	3369	3369	2 2	3369	2 2
Throttle Valve .. .. .	316/083	316/083	1 3	316/083	1 3
Throttle Valve Screwed Nipple .. .. .	316/104	316/010	12 6	316/020	15 0
Throttle Valve Spring .. .. .	5/204	5/204	4 4	5/204	4 4
Jet Needle (Standard) .. .. .	175/308	316/044	1 0	175/309	1 0
Jet Needle (Weak) .. .. .	316/007	316/007	4 0	316/146	5 0
Jet Needle Clip .. .. .	316/030	316/030	4 0	316/029	5 0
Jet Needle Clip Screw .. .. .	316/021	316/021	6 6	316/021	6 6
*Choke Adaptor (Please state bore size)	316/015	316/015	3 3	316/015	3 3
Choke Adaptor Washer .. .. .	—	—	30 0	—	40 0
Choke Adaptor Securing Screws .. .. .	316/100	316/005	2 2	316/025	2 2
Spray Tube .. .. .	316/006	316/006	3 3	316/006	3 3
*Air Tube (Please state bore size when ordering)	316/067	316/067	3 0	316/144	4 0
Air Tube Lock Ring .. .. .	—	—	15 0	—	20 0
Main Jet .. .. .	175/115	175/119	4 0	175/371	5 0
Jet Holder .. .. .	3326	3326	1 6	3326	1 6
Jet Holder Plug Screw .. .. .	15/625	15/625	5 0	15/625	5 0
Jet Holder Plug Screw (Norton) .. .. .	3348	3348	1 6	3348	1 6
Needle Jet .. .. .	—	185/282	1 6	—	—
Air Valve Cable Adjuster .. .. .	316/065	316/065	2 6	316/065	2 6
Lock Nut for ditto .. .. .	2626	2626	6 6	2626	6 6
Air Barrel Top .. .. .	2627	2627	2 2	2627	2 2
Air Valve .. .. .	2507	2507	1 0	2507	1 0
Air Valve Spring .. .. .	2502	2502	1 6	2502	1 6
Air Valve Nipple Holder .. .. .	2558	2558	4 4	2558	4 4
Air Valve Nipple .. .. .	2503	2503	2 2	2503	2 2
Air Jet .. .. .	2629	2629	2 2	2629	2 2
Air Jet Plug Screw .. .. .	316/052	316/052	1 6	316/052	1 6
Air Jet Plug Screw Washer .. .. .	316/066	316/066	1 0	316/066	1 0
Pilot Adjuster and Needle .. .. .	13/163	13/163	1 1	13/163	1 1
Pilot Needle Spring .. .. .	316/283	316/283	2 6	316/283	2 6
Pilot Needle Click Spring .. .. .	2980	2980	3 3	2980	3 3
Pilot Needle Insert .. .. .	2982	2982	2 2	2982	2 2
Pilot Needle Plug Screw .. .. .	2966	2966	1 6	2966	1 6
Banjo Connection for Remote Float Chamber	2403	2403	3 3	2403	3 3
Banjo Washer .. .. .	14/218	14/218	2 6	14/218	2 6
	36/006	36/006	2 2	36/006	2 2

\*These parts are not normally supplied separately as they are machined in position with the mixing Chamber Body.

